



An eLock Center and eLOCK Mobile system check is performed before you productively use the eLOCK System.

The system check ensures that all components are checked for faultless function immediately after a setup or a service pack is installed.

A Equipment Required		
1	PC as per system requirements	-> Data source (DVD, USB stick, download) current release
2	eLock software	-> WIN System device manager without error message
3	PDA (incl. docking station and power supply unit)	-> WIN System device manager without error message
4	CFA (if necessary cable)	
5	2 fittings	-> depersonalised
6	2 identifiers	-> depersonalised
7	1 master	-> depersonalised
B Start		
		Check
1	eLock Center installed	-> Data source (DVD, USB stick, download) current release
2	Programming station connected	-> WIN system control device manager hardware ok
3	Docking station connected - PDA plugged in	-> Activ Sync profile settings -> "Connected" message
4	eLOCK Mobile installed	
C System check		Check - planned result
1	Start eLock Center (without licensing)	-> ? - Info -> Version = DeltaLog
2	Create DEMO clients	= DB is created;
3	Change clients	= Demo client starts Hardware version and firmware version
4	PDA -> connect CF adapter	-> Main menu -> Help -> system information = up-to-date firmware and hardware
5	Programming station <-> eLockCenter Comport	-> Extras-Settings-Hardware = COM xy
6	System definition (ES7000/ ES5000)	-> Extras-Settings-System = ES7(ES5) / 40000 IT (60000 IT)
7	Program master	= Master sets fitting in programming mode
8	Fitting 1 and 2 with <> Create Protection Zone	= Protection zone can be assigned
9	Synchronise PDA	-> Connection successfully made -> Stock -> Selection of fittings offered -> List View Personalise Jobs listed
10	Start eLOCK Mobile	-> Start Screen -> Version = DeltaLog
11	Personalise Fitting 1 and 2	= Personalise fitting = Data transfer Air Interface and/or Wire ok
12	Read fitting info	= Fitting personalised; current time
13	Program IT 1 and 2 with Person and Group of Persons	= IT 1 & 2 programmed without error message
14	Read IT info	= IT data corresponds to DB data
15	Activate IT 1 and 2 with fitting via cross	= Fitting 1 -> IT 1 opens IT 2 does not open = Fitting 2 -> IT 2 opens IT 1 does not open
16	Reset system components	-> Place IT on the PS and delete -> Delete PDA fitting -> Place Master on the PS and delete -> Administration - Client - Delete

Thank you for your cooperation.